


# Kaiser diascop 4



Bedienungsanleitung  
Operating Instructions  
Mode d'emploi  
Instrucciones  
Istruzioni d'uso

Vor dem Entfernen des Gehäuseunterteils unbedingt Netzstecker ziehen!  
Pull mains supply cord plug prior to removing the base of the viewer!  
Il faut absolument débrancher le câble secteur avant d'enlever l'embase de la visionneuse!  
Antes de retirar la parte inferior de la caja, ¡desenchufar sin falta el aparato!  
Prima, però ricordarsi di disinnestare dalla presa elettrica la spina del cavo d'alimentazione!

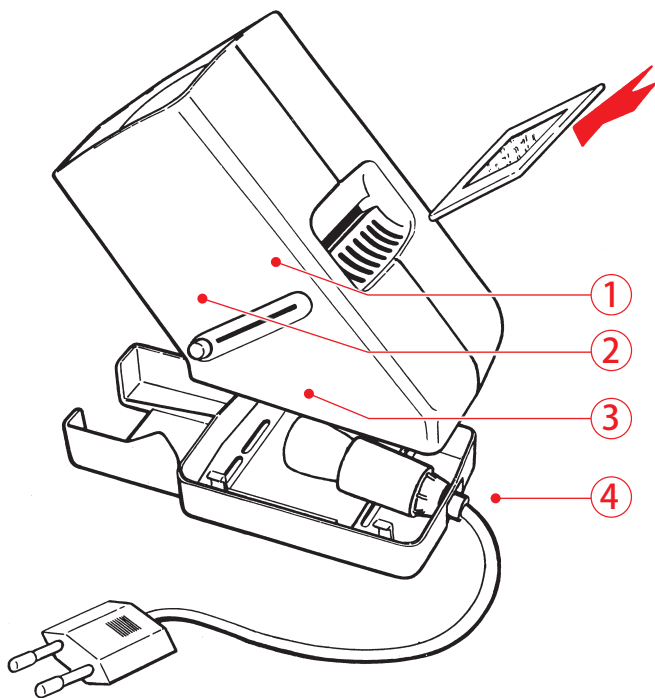

- ① Schlitz für Filmstreifen  
Slot for film strips  
Fente pour films en bande  
Ranuras para filmenes  
Fessura per pellicole in striscia
- ② Taste zum Entnehmen der Dias  
Pushkey for removal of slides  
Touche pour récupérer les dias  
Botón para sacar las diapositivas  
Tasto per prelavare diapositive
- ③ Lampe / Lamp / Lampe /  
Bombilla / Lampadina
- ④ Netzkabel / Mains cord /  
Cordon d'alimentation / Cable de  
línea / Cavo d'alimentazione

Ersatzlampe  
Replacement lamp  
Lampe de rechange  
Lámpara de repuesto  
Ricambio



Art.-Nr. / code no.: 2016

E 14

230 V, 50 Hz



**2006**

